

TLK Rigel Headset

Congratulations on choosing the TLK Rigel headset. You can use it to optimize your work efficiently.

The headset can be used directly by connecting the TLK Rigel connector to the USB port of any PC/Laptop to enable automatic Bluetooth pairing & connecting with TLK Rigel headset.



Box Contents

1. TLK Rigel headset with ear cushions
2. USB charging cable
3. Mic cushion with self-lock cover

TLK Rigel headset Startup & Pairing without TLK Rigel connector

1. Make sure that your smart phone/laptop/PC is Bluetooth enabled
2. Enable the Bluetooth function pairing on your smart phone/ laptop.
3. Turn on your TLK Rigel headset
4. Pair the TLK Rigel headset with your smart phone/ laptop/PC.
 - a. Press the multi-function key for more than 6s, the LED will flash red and blue alternately, which indicates that the headset is in pairing mode.
 - b. Search for TLK Rigel headset on your smart phone/laptop/PC.
 - c. When “TLK RIGEL” starts showing on your list of Bluetooth devices, please click on it to begin the pairing. Sometimes, the PIN code “0000” is required.
 - d. If pairing is successful, the LED will turn on blue
 - e. If pairing fails, please turn off the headset, and repeat step 4a to step 4c
5. TLK Rigel headset can pair with two devices simultaneously. If you want to pair with another device simultaneously, please turn off the Bluetooth function on the first paired device and power off the headset. Then repeat step 2, step 3 and step 4 to pair with the second smart phone/laptop/PC.

Charging the TLK Rigel headset with USB Charging cable

1. Connect the Micro-B USB receptacle connector cable to the TLK Rigel headset charging port.
2. Connect the USB end of the cable to a PC/Laptop USB port or to a 5V DC wall jack power adaptor.
3. A solid RED LED indicates that the headset is not paired when connected to the charger.
4. Once the headset is fully charged, the LED indication will turn solid BLUE.

TLK Rigel headset - Over the head positioning

1. Position the headset receivers so that the soft cushions fit comfortably over the ears on both sides, by adjusting the headband.
2. Adjust the microphone, by moving the mic boom so that the mic is positioned at a distance of 2 fingers width from the corner of the mouth.

TLK Rigel headset - Making a Call


1. To make a call from a connected device, make sure the TLK Rigel headset is turned ON and make the call from the dialer.
2. To end the call, short press (<1 sec) the MFB on the TLK Rigel headset.

TLK Rigel headset - Receiving a Call

1. When receiving a call, a ringing tone will be heard on the connected device and TLK Rigel headset. Press the MFB on the TLK Rigel headset (Short press < 1 sec) to answer the call.
2. To end the call, short press (< 1 sec) the MFB on the TLK Rigel Bluetooth headset.


TLK Rigel headset - Mic Mute & Receive Volume control

For private conversations, mic mute is provided on the TLK Rigel headset. When you press the mic mute button, your caller will not hear you, whereas you can hear them. To resume call, press the mute button again.

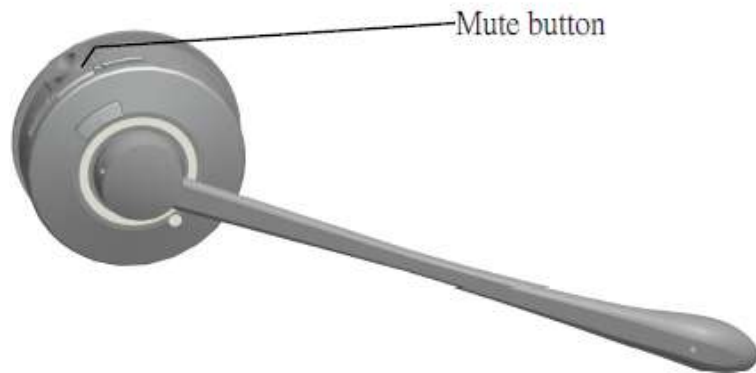

You can adjust the callers voice level to your comfort level by using the digital volume control.


‘+’ button increases the receive volume level and ‘-’ button decreases the receive volume level

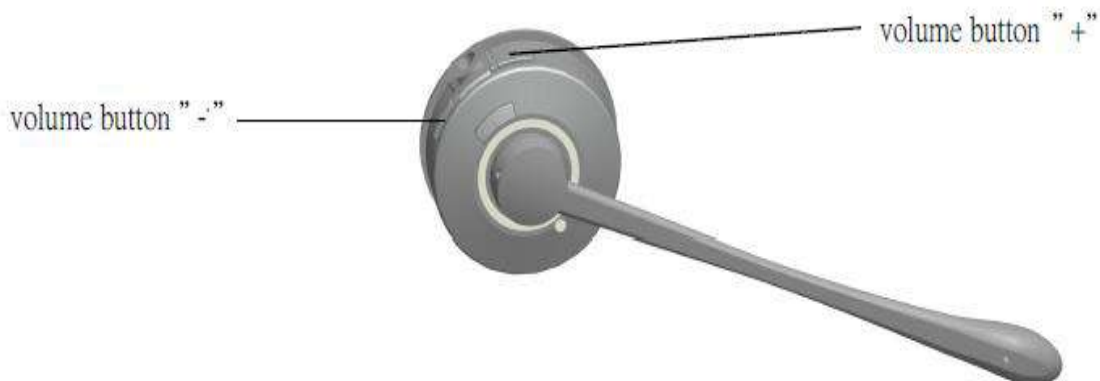

TLK Rigel headset – MFB Features

S. No	Function	Short Press	Long Press
1	Answer a Call	√	
2	End a Call	√	
3	Power On		3s
4	Pairing		6s+
5	Power Off		3s

TLK Rigel headset – LED Indications

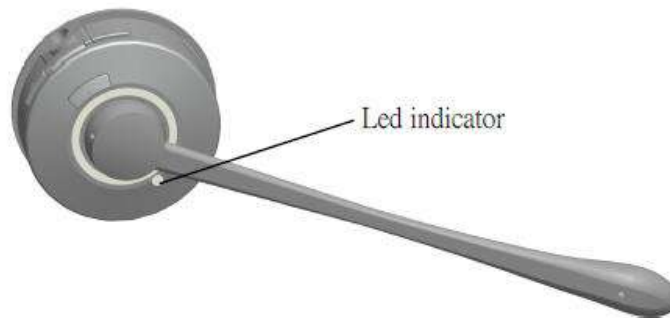

S. No	Headset status	LED status
1	Power on	Blue LED flashes four times
2	Power off	Red LED flashes once
3	Pairing mode	Blue LED and Red LED flash alternately
4	Pairing successfully	Blue LED flashes
5	Charging	Red LED On
6	Fully Charged	Blue LED On